

tier

Fabulous, functional, forever.

TIER SPC INDOOR FLOORING INSTALLATION GUIDE

Version C1.0 07/01/2025



Before installing, please ensure you have downloaded the latest version of this installation guide by scanning this code

A PRODUCT BY **EVA-LAST**
INSPIRED BY NATURE. DESIGNED FOR LIFE.



CONTENTS

- Introduction 3**
- Critical installation points 3**
- Pre-installation 4**
 - Standards 4
 - Safety 4
 - Storage and handling 4
 - Subfloor 4
 - Moisture/Vapour barriers 6
 - Underlay 6
- Planning and site preparation 6**
 - General notes 6
 - Site planning 7
 - Expansion and contraction 8
 - General guidelines for TIER expansion gaps 8
 - Skirting (or similar) 8
 - Excessive temperature fluctuations 9
 - Use of adhesives summary 10
- Working with TIER Flooring 10**
 - Tools 10
 - Cutting 11
 - Installation around radiators and heating pipes 11
 - When angling the profile is not possible 11
- Installation process 11**
- Dismantling panels 13**
- Cleaning and maintenance summary 13**
- Disclaimer and copyright 14**
 - Document disclaimer 14
 - Drawing disclaimer 14
 - Utilisation disclaimer 14
 - Copyright 14

Introduction

Thank you for selecting TIER indoor flooring. In these guidelines we aim to assist you in successfully completing an installation that will last as long as the TIER products themselves.

The guidelines allow for temperature fluctuations of up to 25 °C (80.6 °F) from the temperature at the time of installation and an air humidity range of 30 to 60%. For more detailed information, please refer to the TIER Technical Data Sheet (TDS).

Building codes and standards may differ between jurisdictions or counties. Before installing TIER flooring, ensure that the application is rational and complies with local regulations and building codes, or consult a suitably qualified expert. Ensure that the choice of TIER flooring products is suitable for the intended use. It is recommended that TIER flooring is installed by a professional installer to ensure compliance with the installation and warranty requirements.

Key installation points

- Installation should be carried out in accordance with applicable local regulations.
- Use suitable safety or protective equipment wherever necessary.
- Flooring should be one of the last items installed in any new construction or remodel project. All work involving water or moisture should be completed before flooring installations. Installation onto a wet subfloor will most likely cause cupping, tips and edges to be raised and telegraphing of core and cap.
- Carefully examine the flooring prior to installation for grade, color, finish and quality. Ensure adequate lighting for proper inspection. If the floor is not acceptable, contact your supplier immediately to arrange for replacement. No claim on surface defects will be accepted after installation.
- Check door and door frame clearances and that the floor levels between rooms are even before installation.

Subfloor preparation

- Subfloors must be debris-free, rigid, level, dry, and structurally sound.
 - Permissible deviations of the subfloor should not exceed 3 mm (0.12") at any point on a 3m (10ft). In most instances, a self-leveling screed will be required prior to installation of your TIER product.
 - Newly laid concrete subfloors must be cured for 28 days for every 25mm (1") of depth.
 - In all instances, use a 200-micron DPC moisture barrier between the subfloor and the tier flooring.
 - Overlaying of existing floors should be avoided.
 - Unless the subfloor is perfectly level - a self-levelling screed must be applied.
 - See the full installation guide for specific allowable flooring.
 - The installation surface should provide a barrier to moisture and be fully cured before installing TIER flooring.

Moisture Control:

- Use a 6-mil poly-film moisture barrier over concrete or other subfloor situations when moisture is above 3.5%.

Underlay:


- Do not install TIER on soft under floors like carpet or foam mats.
- If an underlay is required, use a 1.0mm thick layer of IXPE with a density ranging from 7.5X to 10X.
 - Do not install if there is already an underlay in place.

Expansion Gaps:

- Provide an expansion gap of at least 10 mm between TIER flooring edges and all walls, permanent structures, or heavy objects.
 - Expansion gaps must be kept clean of any debris and covered using appropriate skirting, transitions or similar.
 - The allowance is based on a typical change in temperature of 25 °C from the installation temperature and the maximum size of a room (10 m x 10 m). Expansion gaps can be adjusted for larger size rooms, or lower or higher expected changes in temperature.
 - It is recommended to have a larger gap in areas with temperature fluctuations of more than 25 °C or high sunlight exposure (through windows and doors).
- The skirting, or similar, must not pin down the floorboards but should prevent debris and water from entering the expansion gap.
 - Skirting should not be nailed through the flooring and the expansion gap kept clear.
 - The skirting must allow space for the boards to contract and prevent debris and water from entering the expansion gap. Additional sealants may be used as needed.
- Ensure that any underfloor heating operates within 15°C to 27°C (59°F to 81°F). Or adjust the expansion gaps accordingly.
 - Turn off underfloor heating during installation, ensure the floor matches room temperature, then gradually increase the temperature in 5°C increments post-installation, ensuring at least 12mm separation between the heating system and the product.
 - This product can be installed over in-floor heating systems which have a minimum of 12mm separation from the product.
 - Maximum operating temperature should never exceed 29°C.
 - Use of an in-floor temperature sensor is recommended to avoid overheating.

Board measurements and installation

- Work from different boxes at the same time to avoid repetitive patterns.
- The distance between consecutive lateral joints of adjacent boards must be a minimum of 400 mm (16").
 - Do not cut planks shorter than 400 mm (16").

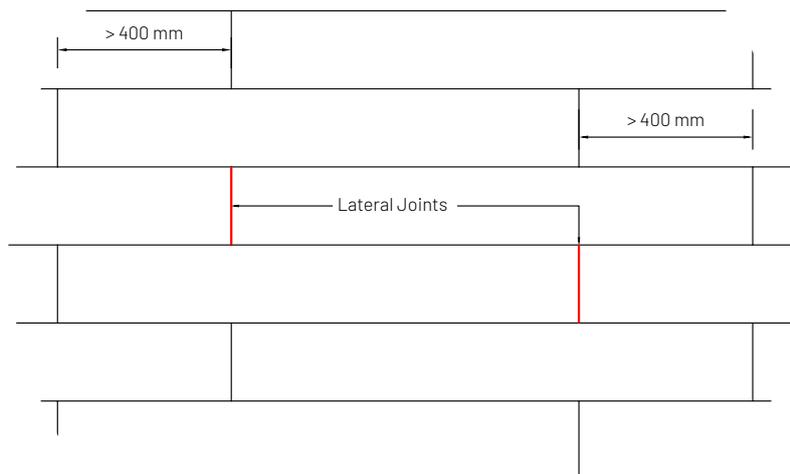

- Do not cut the planks less than 50 mm (2") wide.
 - To comply with this, sometimes both the first and last boards must be cut.
- When removing or adjusting a TIER floorboard, carefully raise both boards on either side of the joint simultaneously. Avoid bending or damaging the profiled edges of the board.
- Do not pin TIER flooring down with any heavy objects, especially kitchen counters and floating islands. The flooring should be installed after any kitchen installation. TIER is a "floating floor" and therefore needs to be able to expand and contract naturally.

Pre-installation

Standards

Be sure to comply with applicable standards and manufacturer specifications. Check that your choice of product is suitable for its intended application. For further product specification and information visit www.tierflooring.com.

Safety

Refer to the applicable Material Safety Data Sheet (MSDS) for additional information. Please do not hesitate to contact Eva-Last should you require any additional assistance.

Always wear appropriate Personal Protective Equipment (PPE) for the various activities involved in installing TIER flooring.

Be mindful of the following:

- Cutting of TIER boards may result in fine particulate matter, as a result, ensure to:
- Work in well-ventilated areas.
- Wear dust masks during cutting and cleaning.
- Wear safety goggles whilst cutting.
- Cut boards may have sharp edges. Use appropriate caution when handling cut boards or when using a flooring guillotine, laminate cutter, utility knife, or similar.
- Clean workspace thoroughly. Wet-wipe, mop, or vacuum surfaces. Do not dry sweep as this can disperse dust. Avoid using excessive amounts of water when cleaning. Ensure debris is not left on the subfloor or in any expansion gap. Use of drop sheets may assist.

Storage and handling

- Take care when lifting, placing, or removing boxes from pallets or other surfaces.
- Ensure the mass handled does not exceed safe limits as defined by applicable local legislation.
- Dropping the boards (and any high impact load in general) can result in damage to the profile or surface of the boards.
- During transportation use corner protectors where strapping is required.
- All boxes of TIER product should be stored completely under cover, protected from heat and/or exposure to direct sunlight as this may cause damage to the product.
- All boxes should be securely stored, avoiding over-stacking and/or eccentric stacking.
- When storing boards, a pallet or flat surface should be used to support the full length of each box.
- No product should be exposed to water or a high moisture content environment.
- Retain excess boards in the event of unforeseen accidents. Store these boards internally in a cool, dry area. Ensure the boards are laid flat, fully supported and off the ground.
- Before installation, visually inspect all materials in optimal lighting conditions to confirm the product is the correct design, colour, pattern, and is free from defects.

Subfloor

- Overlaying an existing floor covering with another must be avoided. Wherever possible, the existing floor covering must be removed, and the subfloor restored to a condition that is acceptable for the laying of TIER.
- Subfloors should be constructed to ensure the protection of TIER from moisture or vapour from the ground. Where structures do not provide adequate moisture protection, moisture barriers must be used.

For concrete subfloors:

- Excess water in the base (above any membrane) must be allowed to evaporate. New bases take time to cure, typically 28 days for every 25 mm of base thickness.
- The flooring should not be laid until the moisture content of the base is less than 4 % (mass/mass).
- The preferred non-destructive test for assessing floor moisture is the insulated hygrometer test procedure as described by Annex B of SANS 10070. This test effectively measures the moisture leaving the floor, from which the moisture content of the floor can be estimated. Resistance type moisture meters are not recommended for the estimation of floor moisture.




• **For timber subfloors:**

- Timber subfloors need careful assessment to determine whether they are acceptable for TIER flooring.
- Timber subfloors that have a moisture content exceeding 18 % at any point shall not be covered.
- A timber subfloor susceptible to rising moisture (e.g., floors at ground level) shall not be covered with TIER flooring. A suspended timber subfloor at ground level can only be covered if the ventilation of the space below the floor complies with SANS 10043.

In the case of new installations, the timber subfloor must comply with SANS 10082. Before a timber subfloor is installed, the moisture content of the substrate shall be equal to the moisture content it will eventually attain in normal service.

- The surface onto which TIER is installed must be a rigid and level surface. In most instances, a self-leveling screed will be required prior to installation of your TIER product. Adequate drying time must be allowed for.
- TIER floorboards are suitable for Grade 1 (as defined by SANS 10155) or similar floors; permissible deviations should not exceed 3 mm at any point on a 3 m line.
- Small imperfections in certain surfaces can be corrected with patching compounds or by sanding.
- Larger imperfections in the surface need to be corrected using a standard or self-leveling screed.
- Never leave any debris on the subfloor prior to the installation of TIER flooring.

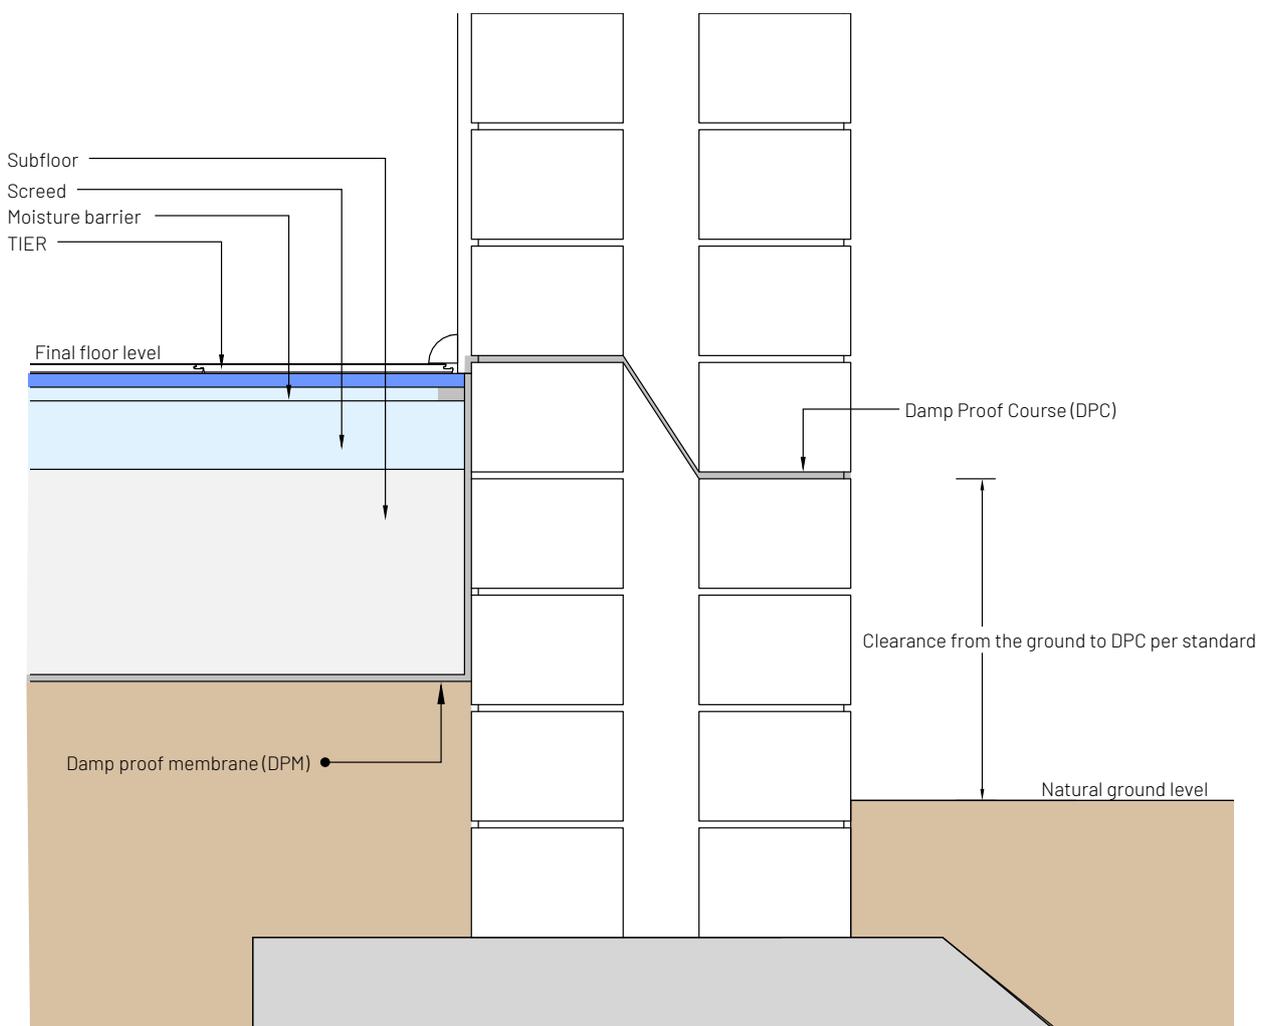

Moisture/Vapour barriers

- In general a 200-micron (Virgin) polyethylene sheet moisture barrier over concrete or other subfloor situations when moisture is above 3.5%.
- A moisture barrier is required for subfloors with moisture content above 3.5%.
- Check door and door frame clearances before installation to ensure that the flooring combined with the barriers do not conflict with the door frame levels.
- Where structures do not provide adequate moisture protection, a suitable moisture/vapour barrier must be employed.
- Various barrier types are commercially available ranging from polyolefin sheeting to liquid/fluid-applied solutions. When using fluid/liquid solutions, such as X-Shield VaporStop HB, the manufacturer's guidelines must be adhered to. The type and thickness of polyolefin sheeting will depend on the conditions of the subfloor and should be determined by a suitably qualified competent person according to SANS 10021 and SANS 10190. In general, a 200-micron (virgin) polyethylene sheet is suitable for typical scenarios.
- Joints of the sheeting should be minimised. Where joints are required, ensure the overlap of the adjacent sheets is a minimum of 200 mm (8"). The overlapping seams should be continuously taped over with a suitable tape. The sheets should

Underlay

- Do not install TIER on soft under floors like carpet or foam mats.
- If an underlay is required, use a 1.0mm (0.04 in) thick layer of IXPE with a density ranging from 7.5X to 10X.
- Do not install an underlay if the TIER flooring already has an underlay.

In-Floor Radiant Heat

- Compatibility and Installation Guidelines:
 - This product can be installed over in-floor heating systems with a minimum separation of 12 mm (0.5 in) from the product. The maximum operating temperature should never exceed 29°C (85°F). It is recommended to use an in-floor temperature sensor to avoid overheating.
- Preparation Before Installation:
 - For newly constructed radiant heat systems, operate the system at maximum capacity before installation to force out any residual moisture from the cementitious topping. The maximum moisture content should not exceed 3.5% (CM method).
 - Turn off the heating system 24 hours before, during, and 24 hours after installation when installing over radiant-heated subfloors. Ensure the room temperature is between 15°C (60°F) and 25°C (80°F) during installation.
- Post-Installation:
 - Once the installation is complete, gradually turn the heating system back on, increasing the temperature in 5-degree increments until reaching normal operating conditions.
 - Refer to the radiant heat system manufacturer's recommendations for additional guidance.
- Important Warning:
 - Electric heating mats that are not embedded into the subfloor are not recommended for use underneath the flooring. Using electric heating mats that are not embedded and applied directly underneath the flooring will void the warranty.

Planning and site preparation

General notes


- Ideally, the preparation and installation of the flooring should ideally not begin until all other trades have completed their work to avoid damage to the flooring or any necessary subfloor preparation. If this is not possible, heavy duty drop sheets can assist in protecting the subfloor and/or flooring.
- For runs longer than 10 m or rooms larger than 10 x 10 m (100 m²), it is necessary to install the flooring in smaller sections interspersed with expansion joints.
 - Use transitions for runs longer than 10m.
- Expansion joints should be placed at intervals of 10 m, or less.
- It is often useful to install expansion joints at doors, or similar, intersections to avoid unsightly transitions within the rooms. Check door and door frame clearances before installation.
- Attempt to pass TIER flooring beneath door frames where possible, ensuring there is space between the frame and the floor to prevent the floor from being pinned down. If this is not possible, cut around the doorframe and install skirting, as one would with intersections of the floorboards and walls. Ensure there are suitable expansion gaps where necessary.
- Install permanent fixtures prior to installation of TIER flooring, providing for requisite expansion joints and similar.
- Avoid placing heavy objects on top of floating installations of TIER flooring, as this will result in pinning the floor down, which can cause product issues or failures.

Site planning

- Measure the room carefully to determine if the room is square. If it is not, the outer (particularly the last) floorboards will need to be cut to match the edges of the room. In some instances, it may be necessary (or more aesthetically pleasing) to cut both the first and last boards.
- Measure the width of the room and calculate the width of the last row of boards. If it is less than 50 mm, cut both the first and last rows of boards to equalize the widths of the first and last rows.
- Remember to allow for expansion gaps in these calculations.
- Decide which side of the room will have the last line of floorboards, it may improve the final appearance to have this line at the outer edge of the room, away from adjacent rooms.
- When installing multiple connected rooms, it is best to start in a passage or in the center of the connecting rooms and work towards the outside of the rooms.
- Plan your board laying direction. It is common practice to install TIER flooring in the direction that natural light enters the room, this is typically perpendicular to a window.



Below is an example of planning a floor laying pattern.

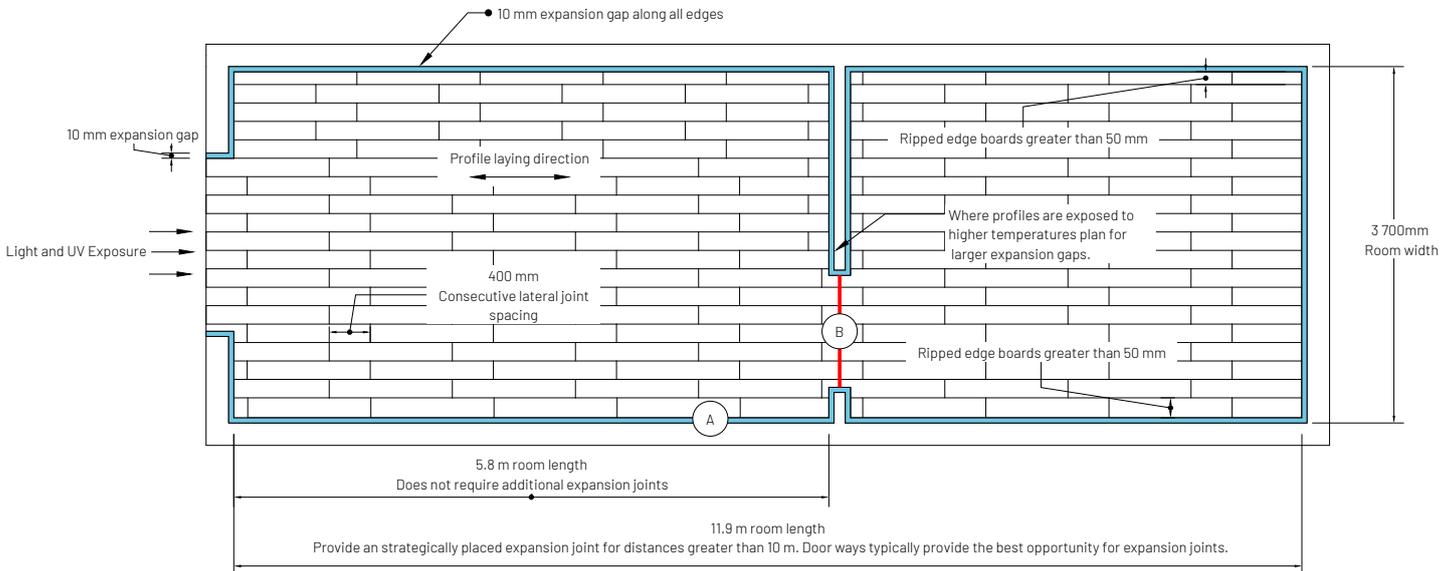

Calculating board ripping requirements

Step 1: Effective room width = Room width - 2 x Expansion gap (10 mm minimum) (A)

Step 2: Number of boards (Round down) = Effective room width ÷ Board width (B)

Step 3: Determine the last board width = A - (B x Board width)

Example:

Step 1: Room width = 3 700 - (10 x 2) = 3 680 mm

Step 2: Number of boards required = 3 680 / 181 = 20.33 boards

Round down to 20 Boards

Step 3: Last board width = 3 680 - (20 x 181) = 60 mm

Is the last profile width wider than 50 mm? Yes, therefore, only the last requires ripping.



Expansion and contraction

General guidelines for TIER expansion gaps

Expansion gaps


- Ensure there is a minimum of a 10 mm expansion gap around the entire perimeter of the room as well as at any intersections with permanent structures or heavy objects. This gap allows the flooring to expand and contract with temperature fluctuations. The allowance is based on a typical change in temperature of 25 °C from the installation temperature and the maximum size of a room (10 m x 10 m). Different expansion gaps can be determined for the specific conditions of an environment or application.
- It is recommended to have a larger gap in areas with temperature fluctuations of more than 25 °C or high sunlight exposure (through windows and doors).
- Place spacers around the perimeter of the flooring area during installation of the flooring (remove during the installation of the skirting). Make allowances for expansion gaps whenever the floorboards meet an obstruction. This can include items such as pipes, columns, fireplaces, doorjamb, etc. Doorjamb can be undercut to provide a seamless finish between the frame and the boards whilst maintaining an expansion gap below the frame. Floors should be adequately protected in the vicinity of open fireplaces.
- This product is not suited to use in saunas or similar applications.

Underfloor Heating

- Ensure that any underfloor heating operates within the specified temperature range. Adjust the expansion gaps accordingly if needed.
- Turn off the underfloor heating during installation and ensure the floor is at the same ambient temperature as the room.
- After installation, gradually increase the underfloor temperature to the required range in 5°C (9°F) increments.
- Ensure that the product is installed over in-floor heating systems that have a minimum of 12mm (0.5 in) separation from the product.

Skirting (or similar)

- Use skirting, transitions, trims or similar to cover the gaps around the edges of the floor or at doorways and similar intersections. This helps create a clean and finished look while accommodating for the necessary expansion and contraction.
- Ensure that the skirting is wide enough to cover the expansion gap whilst still providing adequate space for the floorboards to contract.
- To allow for a 25 °C temperature change in either expansion or contraction from the temperature at the time of installation, a minimum of a 21 mm wide skirting (or similar) is required, based on a maximum room length of 10 m.
- Skirting (or similar) must not be nailed or fixed to the floor. The skirting (or similar) must not pin down the floorboards but should prevent debris and water from entering the expansion gap.

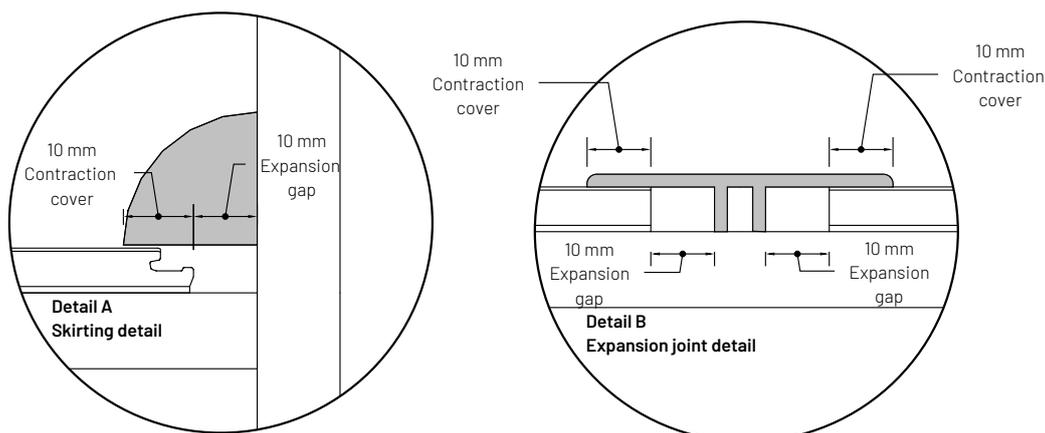



Excessive temperature fluctuations

The general guidelines above offer practical installation parameters based of typical conditions. However, for applications outside of these conditions it may be necessary to calculate specific requirements based on actual expected temperature ranges. To estimate movement expected:

- To allow for an appropriate expansion gap (ΔL) for a room length, multiply the length of the room in meters or feet (L) by a coefficient of 0.06 α (0.033) and by the maximum difference in temperature between the maximum and minimum temperature and the acclimatised installation temperature of the boards (ΔT):

$$\Delta L = L \times \alpha \times \Delta T$$
- Use the same method to estimate maximum contraction size (when boards are fully contracted)
- To determine the width/coverage of the skirting, add the expansion and contraction estimates together.

Steps to determining expansion and contraction gaps

1. Determine the maximum and minimum temperatures of the room.

While indoor temperatures typically follow building standards, maintaining a liveable temperature (typically between 15 to 27°C (59 to 81°F)), spaces such as large halls, entryways, enclosed patios, sunrooms, or rooms with large windows may experience greater temperature fluctuations. To ensure proper installation, consult historical temperature data from reliable sources like local weather websites to determine potential extremes. Although indoor temperatures rarely drop below freezing or match outdoor highs, checking the maximum and minimum change in temperature can provide guidance when accounting for these variations in relation to the room.

2. Determine Change in temperature.

- Expansion gap temperature = Maximum room temperature - Ambient temperature
- Contraction gap temperature = Ambient temperature - Minimum room temperature

3. Calculate the Expansion and contraction.

- Use a linear coefficient of expansion to estimate board movement. For Tier, this coefficient is +- 0.055mm/m/°C. The formula to calculate the

Required gap size = Length of the board in meters(inches) x 0.055mm/m/°C or (0.033 in/in/°F) x change in temperature

- Use the following table determine the maximum change in temperature, multiply the gap size per meter (or foot) by the length of the room.

Required gap size = Length of the room in meters (feet) x corresponding gap in mm (in) based on temperature change.

Gap size per meter of room per temperature change (gap size (mm) /m/°C) *												
Temperature change (°C)	5	10	15	20	25	30	35	40	45	50	55	60
Gap size per meter (mm)	0.28	0.55	0.83	1.1	1.38	1.65	1.93	2.2	2.48	2.75	3.03	3.3
Gap size per foot of room per temperature change (gap size (in) /ft/°F) *												
Temperature change (°F)	41	50	59	68	77	86	95	104	113	122	131	140
Gap size per foot (in)*	0.003	0.006	0.010	0.013	0.016	0.019	0.023	0.026	0.029	0.033	0.036	0.039

*When using the table to determine imperial units add 32° to F to adjust the temperature scale.



Using previously provided example conditions:


Room length is 5800 mm (229")

Installation temperature is 32 °C (90 °F) , with an expected maximum of 40 °C (104 °C) and minimum temperature of -10 °C (14°F).

A 4 mm(0.18") expansion gap is sufficient given the room's proximity to the expected maximum temperature.

A 17 mm (0.7") contraction gap is required due to the low minimum temperature anticipated.

Both calculations are for the total gap for the room and would typically be shared across both sides of the room.

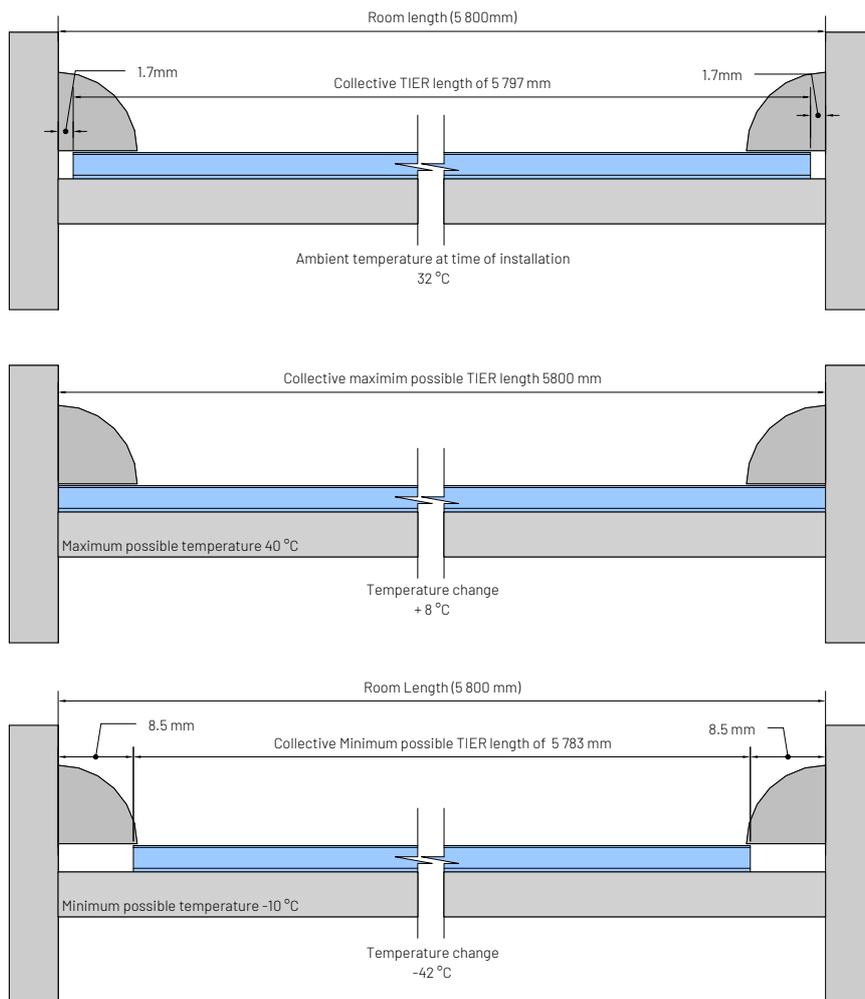

Use of adhesives summary

When installing the TIER Classic residential product range (which does not have an IXPE underlay) in areas which may be exposed to excessive temperature fluctuations (e.g., glass frontages in North facing buildings), the floor may be glued down with an appropriate floor adhesive to reduce movement. The entire room, up to the nearest expansion gap, must utilise the same installation type (i.e., glue or floating). The installation methods should not be mixed. The general guidelines outlined in this document still apply. In addition, ensure the adhesive is suitable for both the board and the subfloor. Typical SPC adhesives are suitable for TIER flooring, please refer to the applicable manufacturer’s guidelines for further information. Liquid/fluid-applied moisture/vapour barriers are required as polyolefin sheeting is not suitable. Underlays are also not suitable. Also ensure that TIER flooring and the subfloor are both clean and dry. . The use of skirting to hide cut edges, etc. is still advisable.

Please clean any adhesive spilt on TIER flooring immediately. Please do not hesitate to contact Eva-Last for further information.





Working with TIER Flooring

Tools

For a successful installation, the following tools will be necessary – pencil, utility knife, flooring guillotine or laminate cutter, tape measure, ruler/straight edge, carpenter’s square, table saw, spacers, hand roller (for glue-down applications), pull bar, and rubber mallet, tapping block, hole saw.

Cutting


- To cut a TIER floorboard, use an indoor flooring guillotine, laminate cutter, or utility knife.
- Use appropriate caution when cutting TIER floorboards, as parts are sharp.
- Do not use boards cut shorter than 400 mm.
- Estimate the width of the last floorboard, if this is less than 50 mm, start the first line of floorboards by cutting them in along the length so that the last line of floorboards will be wider than 50 mm.

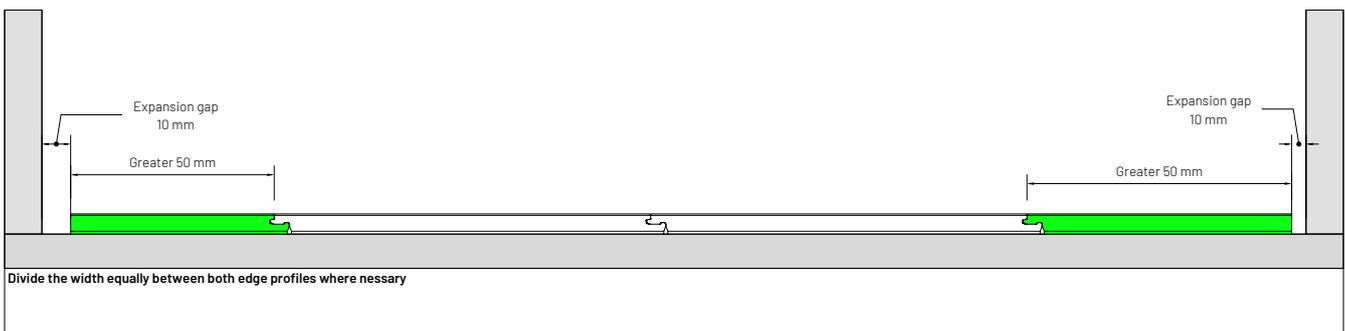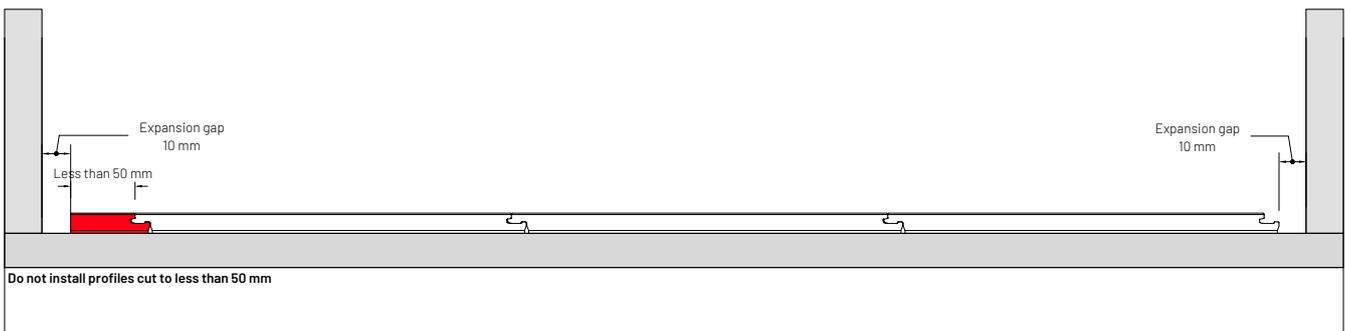




Installation around radiators and heating pipes

Drill holes twice the size of the pipe's diameter, remove a piece of the panel, slot the board into place and attach the small panel piece with an appropriate adhesive.



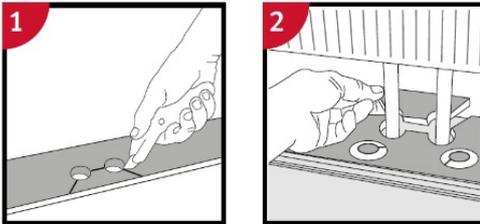


When angling the profile is not possible





Remove the vertical locking strip with a chisel, apply an appropriate adhesive to the strip and, push panels together horizontally, placing spacers between the last board and the wall.

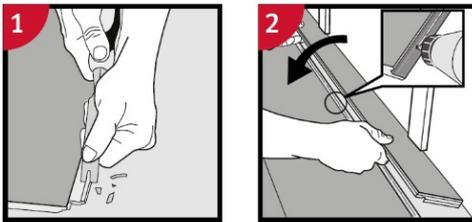

Installation process

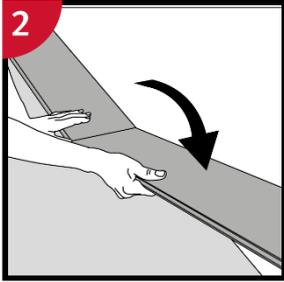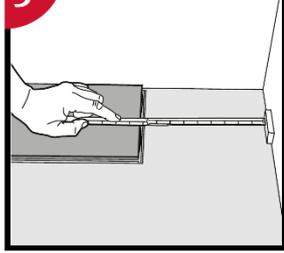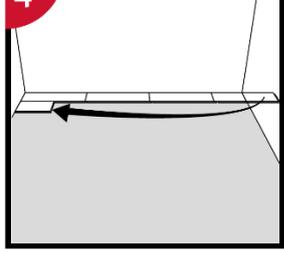
Step 1	Step 2
<p>For the first plank of the first row, insert a spacer of the recommended thickness on the left and align the panel with the wall. Use a spacer for every three complete rows to assist with positioning.</p>	<p>For the second plank of the first row, angle the short end against the previous plank and then fold it down. Continue this method to complete the first row.</p>
	
Step 3	Step 4
<p>At the end of the first row, place a spacer against the wall and measure the length of the last panel to ensure it fits.</p>	<p>For the second row, ensure the first panel is at least 400 mm in length and place a spacer against the left wall.</p>
	

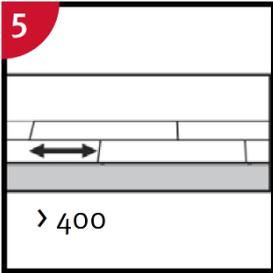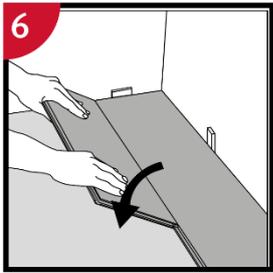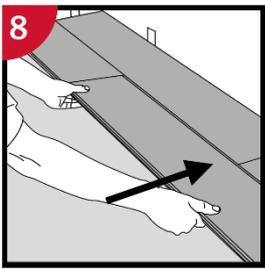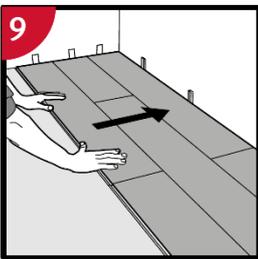

<p style="text-align: center;">Step 5</p> <p>Maintain a minimum distance of 400 mm between consecutive lateral joints of adjacent boards, and avoid cutting profiles shorter than 400 mm.</p>	<p style="text-align: center;">Step 6</p> <p>When placing the plank, angle it against the plank in the previous row, applying forward pressure while folding it down simultaneously. As the planks begin to lock, leave the plank somewhat up angled, and consider using a wedge with an appropriate angle under the plank near the short side joint for support.</p>
	
<p style="text-align: center;">Step 7</p> <p>For the second plank of the second row, position the short end of the plank at an angle against the already installed plank and fold it down completely.</p>	<p style="text-align: center;">Step 8</p> <p>Push and slide the plank to align it with the first one in the row ahead, angling the board to ensure a snug fit. Once aligned, fold the first/previous plank down to a horizontal position. If you are using a wedge for support, you can move it to the next short end joint.</p>
	
<p style="text-align: center;">Step 9</p> <p>After completing rows two and three, adjust the distance to the front wall by placing spacers. Maintain these spacers in position throughout the entire installation process and remove them once the installation is finished.</p>	<p style="text-align: center;">Step 10</p> <p>For the last row (and possibly the first row), ensure a minimum width of 50 mm. Begin by placing a spacer against the wall before taking measurements. Create a simple drawing tool (a piece of wood with a hole), use it to mark the panel along the wall, and then cut the panels lengthwise accordingly.</p>
	



Dismantling panels

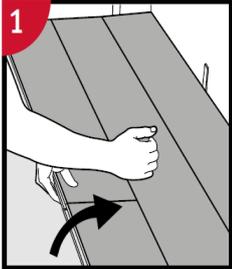Step 1	Step 2
<p>To separate the entire row, gently lift and release the entire row. Fold up the row and release the entire long side.</p>	<p>Disassemble the panels by angling the short sides vertically upwards.</p>
	

Cleaning and maintenance summary

Following these guidelines will help maintain the beauty and durability of your TIER flooring.

Regular Cleaning:

- Regularly sweep or vacuum to remove loose debris.
- Avoid using polishes and waxes as they have no effect on TIER flooring.
- While TIER flooring is highly water-resistant, promptly clean up spills.
- Pay attention to high-traffic areas by keeping them free of dirt and debris.
- For stubborn dirt, clean with a low-concentration mixture of water and dishwashing liquid. Remove excess water promptly.

Steam Cleaning:

- A residential steam mop may be used provided the steam is applied to a microfiber pad and not directly to the floor.
- Set the steam mop to the appropriate setting for the TIER floor and does not exceed 60°C (140°F).
- Steam mop in the length direction of the planks only..

Spill Management:

- Do not allow topical moisture to remain on the floor longer than the time specified in the product warranty.
- While TIER flooring is highly water-resistant, it is important to promptly clean up spills to prevent potential damage.

Chemical Compatibility:

- Avoid using polishes and waxes as they have no effect on TIER flooring.
- Refer to TIER's Technical Data Sheets (TDS) for chemical compatibility information.

Furniture Protection:

- When moving heavy furniture, lift it rather than dragging it.
- Furniture should be moved onto the newly installed floor using an appliance hand truck over hardboard runways.
- Frequently moved furniture should be equipped with felt pads to avoid scratching the floor.
- Heavy furniture and appliances should be equipped with non-staining large surface floor protectors.
- Furniture with casters or wheels must have wide, rubber, non-staining casters suitable for resilient floors. Do not use ball-type casters as they can damage the floor.
- Caster-wheeled chairs should have wide, rubber casters.
- Protective mats are required under office chairs.

Floor Mats and Protectors:

- Use non-staining mats. Rubber mats may discolour the floor.
- Use walk-off mats at entrances to prevent dirt and grit from being tracked onto the floor.
- Protective mats are required under office chairs.

Handling of Oil and Petroleum Products:

- Oil or petroleum-based products can cause surface staining. Avoid tracking asphalt driveway sealer or automobile oil drips onto the Digitally printed Eco-core floor.

Temperature Considerations:

- Do not expose TIER flooring to temperatures exceeding 60°C (140°F).

Floor Safety:

- TIER, like other smooth floors, may become slippery when wet. Allow the floor to dry completely after cleaning.

Moving Heavy Furniture:

- When moving heavy furniture, always lift it rather than dragging it to avoid scratching the floor.

Robotic Cleaners:

- TIER flooring is suitable for use with robotic vacuum cleaners and robotic mops.

Floor Mats and Protectors:

- Following these guidelines will help maintain the beauty and durability of your TIER flooring.

Disclaimer and copyright

Document disclaimer

The provided information is offered in good faith as accurate but without guarantee. Eva-Last makes no warranties or representations of any kind (express or implied) about the accuracy, adequacy, currency, or completeness of the information, or that it is necessarily suitable for the intended use.

Compliance with this document does not guarantee immunity from breach of any statutory requirements, building codes or relevant standards. The final responsibility for the correct design and specification rests with the designer and, for its satisfactory execution, with the contractor. Appropriate warnings and safe handling procedures should be provided to handlers and users.

While most data have been compiled from research, case histories, experience and testing, small changes in the environment can produce marked differences in performance. The decision to use a material, and in what manner, is made at your own risk. The use of a material and method may therefore need to be modified to its intended end use and environment.

Eva-Last, its directors, officers or employees shall not be responsible for any direct, indirect, or special loss or damage arising from, or as a consequence of, use of, or reliance upon, any information contained in this document or other documents referenced herein. Eva-Last expressly disclaims any liability which is based on or arises out of, the information or any errors, omissions, or misstatements herein.

Drawing disclaimer

All dimensions and specifications are offered in good faith as accurate but without guarantee. The information captured herein may not contain complete details. Eva-Last makes no warranties or representations of any kind (express or implied) about the accuracy, adequacy, currency, or completeness of the information, or that it is necessarily suitable for the intended use.

Compliance with this document does not guarantee immunity from breach of any statutory requirements, building codes or relevant standards. The final responsibility for the correct design and specification rests with the designer and, for its satisfactory execution, with the contractor.

Utilisation disclaimer

Legislation may differ between jurisdictions. Before installing any Eva-Last product, ensure that the application is rational and complies with the local regulations and building codes. Wherever necessary, consult a suitably qualified professional. Be sure to comply with material manufacturer specifications. Where manufacturers and building codes differ, revert to the building code requirements. Check that your choice of product is suitable for its intended application. For further product specification and information visit www.eva-last.com.

Copyright

If reprinted or reproduced or utilised in any form Eva-Last should be acknowledged as the source of the information. Eva-Last periodically updates the information contained in this document as well as that of the Eva Last documents that have been referenced herein. Before using this document, please refer to the Eva-Last website (www.eva-last.com) for the most up-to-date documents.

Contact information

Eva-Last

Email: info@eva-last.com

Website: www.eva-last.com